



New Pig

Grippy Adhesive-Backed Mats

TAKE FLOOR SAFETY
TO THE **NEXT
LEVEL**




GRIPPY FLOOR MATS



GRIPPY CUSTOM-PRINTED
FLOOR MATS



GRIPPY FLOOR MATS WITH
SAFETY BORDERS

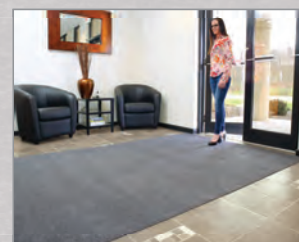

GRIPPY BERBER CARPETED
ENTRANCE MATS



GRIPPY ANTIMICROBIAL MATS



GRIPPY ABSORBENT MATS





GRIPPY ADHESIVE-BACKED MATS

The answer to preventing slips, trips and falls?
It's right under your feet!

Award-winning PIG Grippy Adhesive-Backed Mats are the perfect addition to your floor safety measures.

Our team perfected New Pig's exclusive stick-and-release technology and invented the world's first adhesive-backed absorbent mat. Over 10 years later, no one comes close in quality, range and reliability.

Our Adhesive-Backed Mats range is proven to never disintegrate or leave any residue behind – even when saturated. They stick tight to most commercial floor surfaces and won't ripple, bunch up or flip over. They offer the perfect solution for reducing slips, trips and falls, as well as the costly legal claims often associated with these types of incidents.

They provide a safer, lower-profile, more durable and aesthetically-pleasing floor safety solution when compared with traditional rubber-backed mats.

Isn't it time to take your floor safety to the next level with PIG Grippy Adhesive-Backed Mats?



PIG Grippy Adhesive-Backed Mats
EASY FIT — EASY CLEAN — EASY CHANGEOUT
Find out just how easy on page 23.

TESTED & CERTIFIED!



EU: DIN 51130:2014 – Grippy Floor Mat classified as slip resistance R13 according to DIN51130 - suitable for use on floors in workrooms and work areas where there is increased risk of slipping due to grease, oil, water, foods, left-overs, dust, flour, paint clippings etc.

BS7976-2:2002+A1:2013 - Low slip. Tested in accordance with BS 7976-2:2002+A1:2013, and demonstrated low slip potential in both wet and dry conditions.

BS EN 13501-1:2007+A1:2009 - Fire classification Bfl-s1 when tested according to BS EN 13501-1.

US: National Floor Safety Institute (NFSI): When used as part of your floor safety program, high-traction surfaces such as Grippy Floor Mat have been proven to reduce slip-and-fall claims by as much as 90%.

EXCLUSIVE BENEFITS OF PIG GRIPPY ADHESIVE-BACKED MATS



SAFER

Reduce hazards.

Trap dirt and liquids for months at a time to prevent their spread for cleaner, safer, drier floors.



CLEANER

Keep floors cleaner for longer.

Traps dirt, grease, salt and a variety of liquids to keep floors looking their best.



LONGER LASTING

Stays down longer.

Durable mat construction lasts longer than traditional-style floor mats — stays on the job for up to 6 months!



CUSTOMISABLE

Easily cut to fit.

Create perfect, continuous coverage in any size or shape. No gaps. No ripples. No overlaps.



GREENER

Environmental choice.

PIG Grippy Floor Mat has up to 91% lower environmental impact than rental floor mats. Grippy Absorbent Mat is made using 25% pre-consumer recycled content. Grippy Carpet Entrance Mat's absorbent layer is made from 100% post-consumer recycled polyester fabric.



ECONOMICAL

Save time and money.

Protect floor surfaces and decrease cleaning time, all while reducing slip, trip and fall claims.

Floor



GRIPPY FLOOR MATS

Pg **8**



GRIPPY CUSTOM-PRINTED
FLOOR MATS

Pg **10**



GRIPPY FLOOR MATS WITH
SAFETY BORDERS

Pg **12**



GRIPPY FLOOR MAT
STARTER PACK

Pg **13**

Carpeted



GRIPPY BERBER CARPETED
ENTRANCE MATS

Pg **14**

Antimicrobial



GRIPPY ANTIMICROBIAL
RESTROOM MATS

Pg **18**



GRIPPY ANTIMICROBIAL
SINK & DRYER MATS

Pg **19**

Absorbent



GRIPPY ABSORBENT MATS

Pg **20**

Accessories



GRIPPY MAT ACCESSORIES

Pg **22**

Grippy Adhesive-Backed Mats Selection Guide

GRIPPY FLOOR MATS - See Pages 8-12

Durable and low-profile mats stay in place and trap dirt, grease, salt and moisture. Available in original Floor Mat, Custom Printed Floor Mat and Floor Mat with Safety Borders varieties.

Impermeable Poly Layer

Stops liquids from passing through to floor.

Adhesive Backing

Sticks tight, but peels up easily. Won't disintegrate in wet conditions.


Tough Absorbent Top

Traps dirt and grime, quickly wicks liquid and dries fast.


Interlocked & Heat Fused Fibres

Trap dirt and offer incredible durability.

Styles:

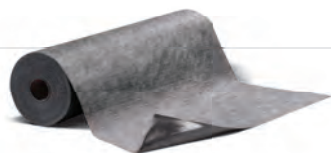

Floor Mat

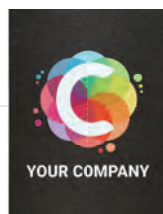

Custom Printed Floor Mat



Floor Mat with Safety Borders



91% LOWER environmental impact than rubber-backed mats!*

Depending on conditions and traffic patterns, Grippy Floor Mat only needs replaced twice per year. Grippy Floor Mat would have to be replaced 47 times per year to have the equivalent environmental impact of rubber-backed mats. Even if you OWN rubber-backed floor mats and don't launder them, Grippy Floor Mat still has a LOWER environmental impact of at least 40%.

*Based on an independent Energy and Environmental Impact Comparison of the PIG® Grippy® Floor Mat and Rental Floor Mat study. Conducted by the Golisano Institute for Sustainability, Rochester Institute of Technology, March 20, 2017. Full study available upon request.

GRIPPY CARPET ENTRANCE MATS - See Pages 14-15

Plush and attractive alternative to outdated rubber-backed entrance mats. High-performance, low-profile surface, with stylish texture for entrances that impress.

Impermeable Poly Layer

Stops liquids from passing through to floor.

Adhesive Backing

Sticks tight, but peels up easily. Won't disintegrate in wet conditions.

Tough Absorbent Top

Traps dirt and grime, quickly wicks liquid and dries fast.



100% Recycled Top Layer

Absorbent top layer is constructed from 100% post-consumer recycled polyester.

Textured Surface

Attractive fibre construction resists fading, staining and crushing.

Styles:



Black



Burgundy



Grey

GRIPPY ANTIMICROBIAL MATS - See Pages 16-19

All the safety features of Grippy Floor Mat plus a permanently infused antimicrobial technology that fights odour causing bacteria and mould.

Impermeable Poly Layer

Stops liquids from passing through to floor.

Adhesive Backing

Sticks tight, but peels up easily. Won't disintegrate in wet conditions.

Tough Absorbent Top

Quickly wicks liquids and dries fast.



DW-30 Ultra-Fresh Infused

Permanent infusion of DW-30 Ultra-Fresh antimicrobial technology to help fight odours, mould, and bacteria growth.

Interlocked & Heat Fused Fibres

Trap dirt and offer incredible durability.

Styles:



Small Urinal

Large Urinal

Plunger

Toilet

Sink & Dryer

Runners

GRIPPY ABSORBENT MATS - See Pages 20-21

Improve industrial floor safety and reduce slips, trips and falls around machines, equipment and workstations where oily overspray is an issue.

Impermeable Bottom Layer

Prevents absorbed liquids from leaking through to the floor.

Adhesive Backing

Keeps mat in place, pulls up easily and won't disintegrate in wet conditions.

Strong Construction

Tough spunbond top layer, with zigzag stitching for added strength, stands up to heavy foot traffic and equipment drive-overs.



25% Recycled Content

Manufactured using 25% pre-consumer recycled content.

Multi-Layered

Layers of fine-fibre polypropylene quickly absorb and trap oils, coolants, solvents and water.

Styles:



Pads

Roll

Absorb WATER, URINE, soap and sanitiser.

Absorb OILS, coolants, solvents and water.



NO SHIFTING, BUNCHING OR FLIPPING OVER!

Create a safe amount of walk-off coverage with **PIG Grippy Floor Mat.**

PIG GRIPPY FLOOR MAT RANGE

Stop slips, trips and falls for good with the thinnest commercial floor mats you can buy.

- ▶ Install a high traction, customised walking surface anywhere you need it
- ▶ Won't obstruct doors or become a tripping hazard
- ▶ Leave mat in place and vacuum, mop, or even deep clean with a floor scrubber
- ▶ Durable construction withstands constant traffic for up to 6 months

Our Floor Mat range makes it easy to install a high-traction, customised walking surface anywhere you need it – with no dangerous gaps or overlaps – in entrances, aisles, transition areas, walkways and more.

They are absorbent, quick-drying and dirt-trapping to prevent the tracking and seepage associated with traditional rubber-backed mats, which often leads to dangerous slip and fall incidents and unsightly floors.

Unlike traditional rubber-backed mats, our adhesive-backed Floor Mat range never shifts, ripples or bunches up, so they won't obstruct doors or become a tripping hazard. And because they are ultra-low profile, they're perfect for use with wheelchairs, walkers and other light-wheeled traffic, too!

The full Floor Mat range can be cleaned along with the rest of your floor – just leave mat in place and vacuum, mop or even deep clean with a floor scrubber for super-easy, stay-in-place maintenance!

Their durable construction withstands constant traffic for up to six months, so you change them out less often – saving you time and money. But, when the time does come to replace them, our exclusive adhesive formulation pulls up easily without leaving any residue behind.

So, for cleaner, safer floors, replace your outdated rental and rubber-backed mats with PIG Grippy Adhesive-Backed Mats – the mat that stays put no matter what.

GRIPPY FLOOR MAT



See Pages 8-9

Our original adhesive-backed mat is the ideal solution for commercial environments like offices, receptions and retail environments.

GRIPPY CUSTOM-PRINTED FLOOR MAT



See Pages 10-11

Adhesive-backed Custom-Printed Floor Mat reduces slip, trip and fall risks while keeping your brand, marketing or even safety messaging front and centre.

GRIPPY FLOOR MAT WITH SAFETY BORDERS



See Page 12

Hi-vis, chevron-bordered mat is great for industrial applications, such as warehouses and manufacturing floors, where delineating spaces and walkways is essential.

GRIPPY FLOOR MAT STARTER PACK



See Page 13

Start creating safer floors and experience how easy our Floor Mat range is to fit, maintain and changeout with this handy all-in-one kit.

Discover the full range of Grippy Adhesive-Backed Floor Mats on pages 8-21.




COMMERCIAL PREMISES



AIRPORTS



EDUCATIONAL SETTINGS

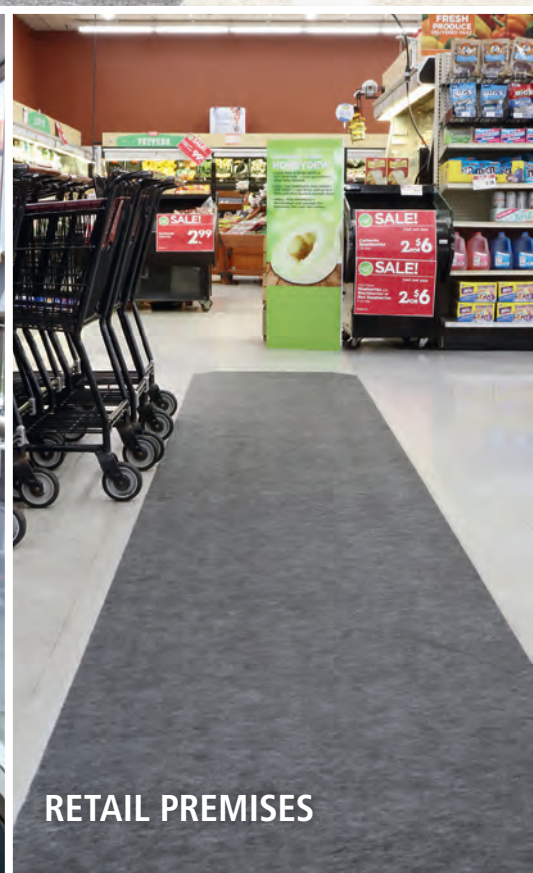

RETAIL PREMISES

PIG GRIPPY FLOOR MATS

The original adhesive-backed, high-traction mat – for coverage everywhere you need it.


- Extremely-durable and low-profile floor safety solution
- Effortless to maintain and easy to clean
- Customisable floor protection that stops dirt at the door

Our original Grippy Adhesive-Backed Floor Mats range offers a highly absorbent, extremely durable and low-profile floor safety solution that's perfect for reducing slips, trips and falls in high-traffic areas.

It traps dirt, grease, salt, mud and moisture to prevent it being tracked through your premises. And its innovative construction is effortless to maintain and easy to clean using everything from a vacuum to a commercial floor scrubber.

The exclusive adhesive sticks to most commercial floor surfaces and stays put, preventing the dangerous shifting, bunching and flipping associated with traditional rubber-backed mats.

Available in pre-cut mat lengths or continuous rolls, up to 30m long, for customisable floor protection that stops dirt at the door.

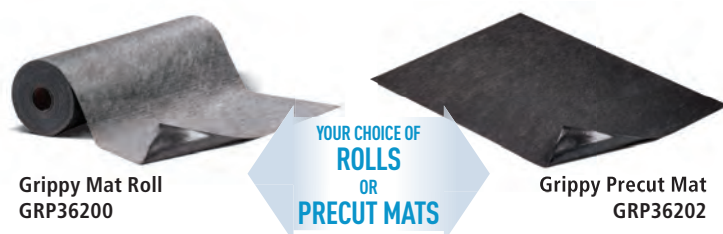

DURABILITY



Stays down for up to **6 months**

WHERE IT WORKS

For entrances, walkways, transition areas, wet environments, front-of-house and common areas in a wide variety of premises, including:

- ✓ Retail Environments
- ✓ Educational Settings
- ✓ Leisure & Hospitality Venues
- ✓ Manufacturing Facilities
- ✓ Offices & Commercial Premises
- ✓ Airports, Rail & Bus Terminals
- ✓ Medical & Care Facilities

COMPATIBILITY

Suitable for hard floor surfaces including:

- ✓ Concrete
- ✓ Quarry Tile
- ✓ Vinyl Tile
- ✓ Linoleum
- ✓ Ceramic Tile

MAT MAINTENANCE

Easily clean in place using one of these tools:



Vacuum

Spot Clean

Commercial Floor Scrubber



Brush



Carpet Extractor



Mop



For certifications details, see page 2.

REQUEST A FREE SAMPLE

PIG® Grippy® Adhesive-Backed Floor Mats



Specify Colour: Black Grey

Size	Unit	Absorbs Up To	Item #
61cm W x 30m L	1 roll	20L/roll	GRP24200
91cm W x 7.6m L	1 roll	7.6L/roll	GRP36207
91cm W x 15.3m L	1 roll	15L/roll	GRP36201
91cm W x 15.3m L	10 mats/roll	15L/roll	GRP36202
91cm W x 30m L	1 roll	30L/roll	GRP36200
122cm W x 15.3m L	1 roll	19.7L/roll	GRP48201
91cm W x 6m L	4 mats/roll	6L/roll	GRP36211
183cm W x 6m L	2 mats/roll	13.2L/roll	GRP72203

PIG® Grippy® Adhesive-Backed Floor Mat - Heavyweight



Specify Colour: Black Grey

Size	Unit	Absorbs Up To	Item #
91cm W x 15.3m L	1 roll	28.4L/roll	GRP36301

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.


TRAP DIRT AT THE DOORWAY

20 Days, 1,000 People, 11Kg of Dirt.
Providing a longer walkoff with Grippy captures more dirt.

Grippy Adhesive-Backed Floor Mat



Traditional mats

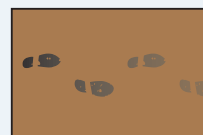

To find out more about the technology behind our original Grippy Floor Mat see page 4.



FACILITY ENTRANCES



EDUCATIONAL SETTINGS



RETAIL ENVIRONMENTS



SUPERMARKETS

PIG GRIPPY CUSTOM-PRINTED FLOOR MATS

All the benefits of original Grippy Floor Mat plus your logo or message custom printed!

- ▶ High-definition custom printing
- ▶ Highly-absorbent, extremely durable and easy to maintain
- ▶ Lightweight, low-profile, no-budge design

We combined all the floor safety features and convenience of our original Grippy Adhesive-Backed Floor Mat with the added benefit of high-definition custom printing.

Just like the original Grippy Floor Mat, our custom-printed version offers the same highly absorbent, extremely durable and easy-to-maintain walking surface.

State-of-the-art, UV-resistant, digital printing gives you the flexibility to change your look and/or messaging every three to six months. And the smooth, flat surface produces sharper, more detailed images that won't distort over time like carpet mats do as the pile crushes.

Its lightweight, low-profile, no-budge design is the perfect solution for trapping dirt, grease, salt, mud and moisture to prevent it being tracked through your premises and reducing trip hazards to improve floor safety.



YOUR LOGO OR
MESSAGE HERE! ➔

DURABILITY



Stays down for up to **6 months**

WHERE IT WORKS

For entrances, walkways, aisles, front-of-house and high-footfall areas in a wide variety of settings, including:

- ✓ Retail Premises
- ✓ Educational Settings
- ✓ Leisure & Hospitality Venues
- ✓ Vehicle Dealerships
- ✓ Offices & Commercial Premises
- ✓ Airports, Rail & Bus Terminals
- ✓ Medical & Care Facilities

COMPATIBILITY

Suitable for hard floor surfaces including:

- ✓ Concrete
- ✓ Quarry Tile
- ✓ Vinyl Tile
- ✓ Linoleum
- ✓ Ceramic Tile

MAT MAINTENANCE

Easily clean in place using one of these tools:



Vacuum

Spot Clean

Commercial Floor Scrubber



Brush



Carpet Extractor



Mop



For certifications details, see page 2.

REQUEST A FREE SAMPLE

PIG® Grippy® Adhesive-Backed Custom-Printed Floor Mat



Specify Colour: Black Grey			
Size	Unit	Absorbs Up To	Item #
91cm W x 152cm L	1 mat	1.5L/mat	GRPLM3X5
91cm W x 305cm L	1 mat	3L/mat	GRPLM3X10
122cm W x 183cm L	1 mat	2.4L/mat	GRPLM4X6
183cm W x 305cm L	1 mat	6.6L/mat	GRPLM6X10

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.


To find out more about the technology behind our original Grippy Floor Mat see page 4.



MANUFACTURING



WAREHOUSES & STORAGE FACILITIES

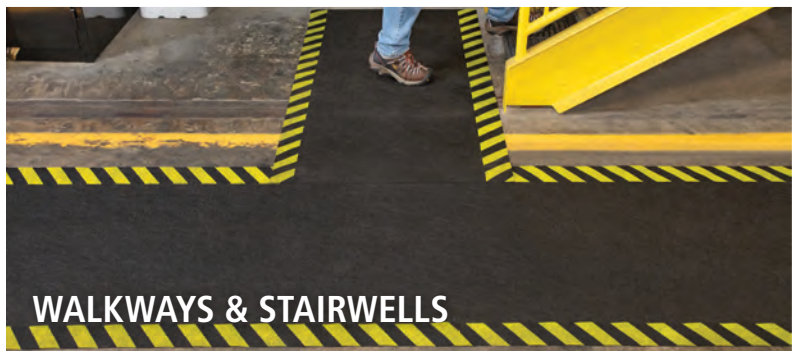

WALKWAYS & STAIRWELLS

PIG GRIPPY FLOOR MATS WITH SAFETY BORDERS

Put the path to floor safety front and centre.

- ▶ Highlight dangers and create safer pathways
- ▶ Durable enough to withstand even the toughest of industrial wear and tear

We combined all the floor safety features and convenience of our original Grippy Adhesive-Backed Floor Mat with a high-vis yellow chevron border to help highlight dangers and create safer pathways through hazardous industrial environments.

The exclusive adhesive backing keeps the mat exactly where you put it with no shifting, bunching up or flipping over.

Its high-traction surface is durable enough to withstand even the toughest of industrial wear and tear, standing up to forklift, pallet truck and heavy foot traffic for up to six months.



GRPSB36200

REQUEST A FREE SAMPLE

PIG® Grippy® Adhesive-Backed Floor Mats with Safety Borders

Size	Unit	Absorbs Up To	Item #
91cm W x 15.3m L	1 roll	15L/roll	GRPSB36201
91cm W x 30m L	1 roll	30L/roll	GRPSB36200

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

DURABILITY



Stays down for up to **6 months**

WHERE IT WORKS

For walkways, stairwells, transition areas, wet environments and non-public areas in a wide variety of industries, including:

- ✓ Manufacturing
- ✓ Warehouse & Storage
- ✓ Leisure & Hospitality Venues
- ✓ Heavy Engineering
- ✓ Transportation & Logistics

COMPATIBILITY

Suitable for hard floor surfaces including:

- ✓ Concrete
- ✓ Quarry Tile
- ✓ Vinyl Tile
- ✓ Linoleum
- ✓ Ceramic Tile

MAT MAINTENANCE

Easily clean in place using one of these tools:



Vacuum



Brush



Mop



Spot Clean



Carpet Extractor



Commercial Floor Scrubber



For certifications details, see page 2.

To find out more about the technology behind our Grippy Floor Mat with Safety Borders see page 4.



PIG GRIPPY FLOOR MAT STARTER PACK

Everything you need to start creating cleaner, safer floors.

- ▶ Sticks tight to most commercial floor surfaces, reducing slip, trip and fall incidents
- ▶ Comes complete with everything you need to get started with our Grippy Floor Mat range


Get everything you need to stop wrestling with rubber-backed rental mats in one handy kit!

Grippy Floor Mat's exclusive adhesive sticks tight to most commercial floor surfaces, reducing slip, trip and fall incidents all while trapping dirt, grease, salt, mud and moisture at the door for cleaner and safer floors.

This useful Starter Pack comes complete with everything you need to get started with our Grippy Floor Mat range – including one roll of our original PIG Grippy Adhesive-Backed Mat, a Safety Knife for clean, precise cuts and an Installation Board to help you customise and achieve a professional finish when fitting.

Perfect for creating safer entrances, walkways, transition areas and common areas in a wide variety of premises.

Discover just how easy it is to work with Grippy Floor Mat. Make the switch to the mat that sticks and start creating safer and cleaner floors today with our Floor Mat Starter Pack.

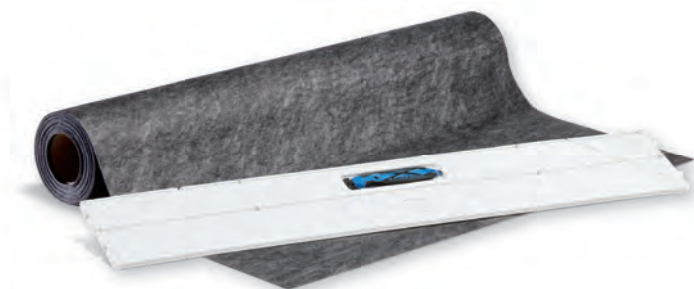

GRPE36206

PIG® Grippy® Adhesive-Backed Floor Mat Starter Pack



Colour: Grey			
Size	Unit	Absorbs Up To	Item #
91cm W x 7.6m L	1 roll	7.5L/roll	GRPE36206
Contents: 1 - 91cm x 7.6m Grippy Floor Mat • 1 - 96.5cm x 15cm Installation Board • 1 - Safety Knife			


Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

Want to make installation and removal even easier? Check out our range of accessories on page 22.

Grippy Carpeted Entrance Mats & Starter Pack



Rubber-backed mats don't stay in place and can cause trip hazards.

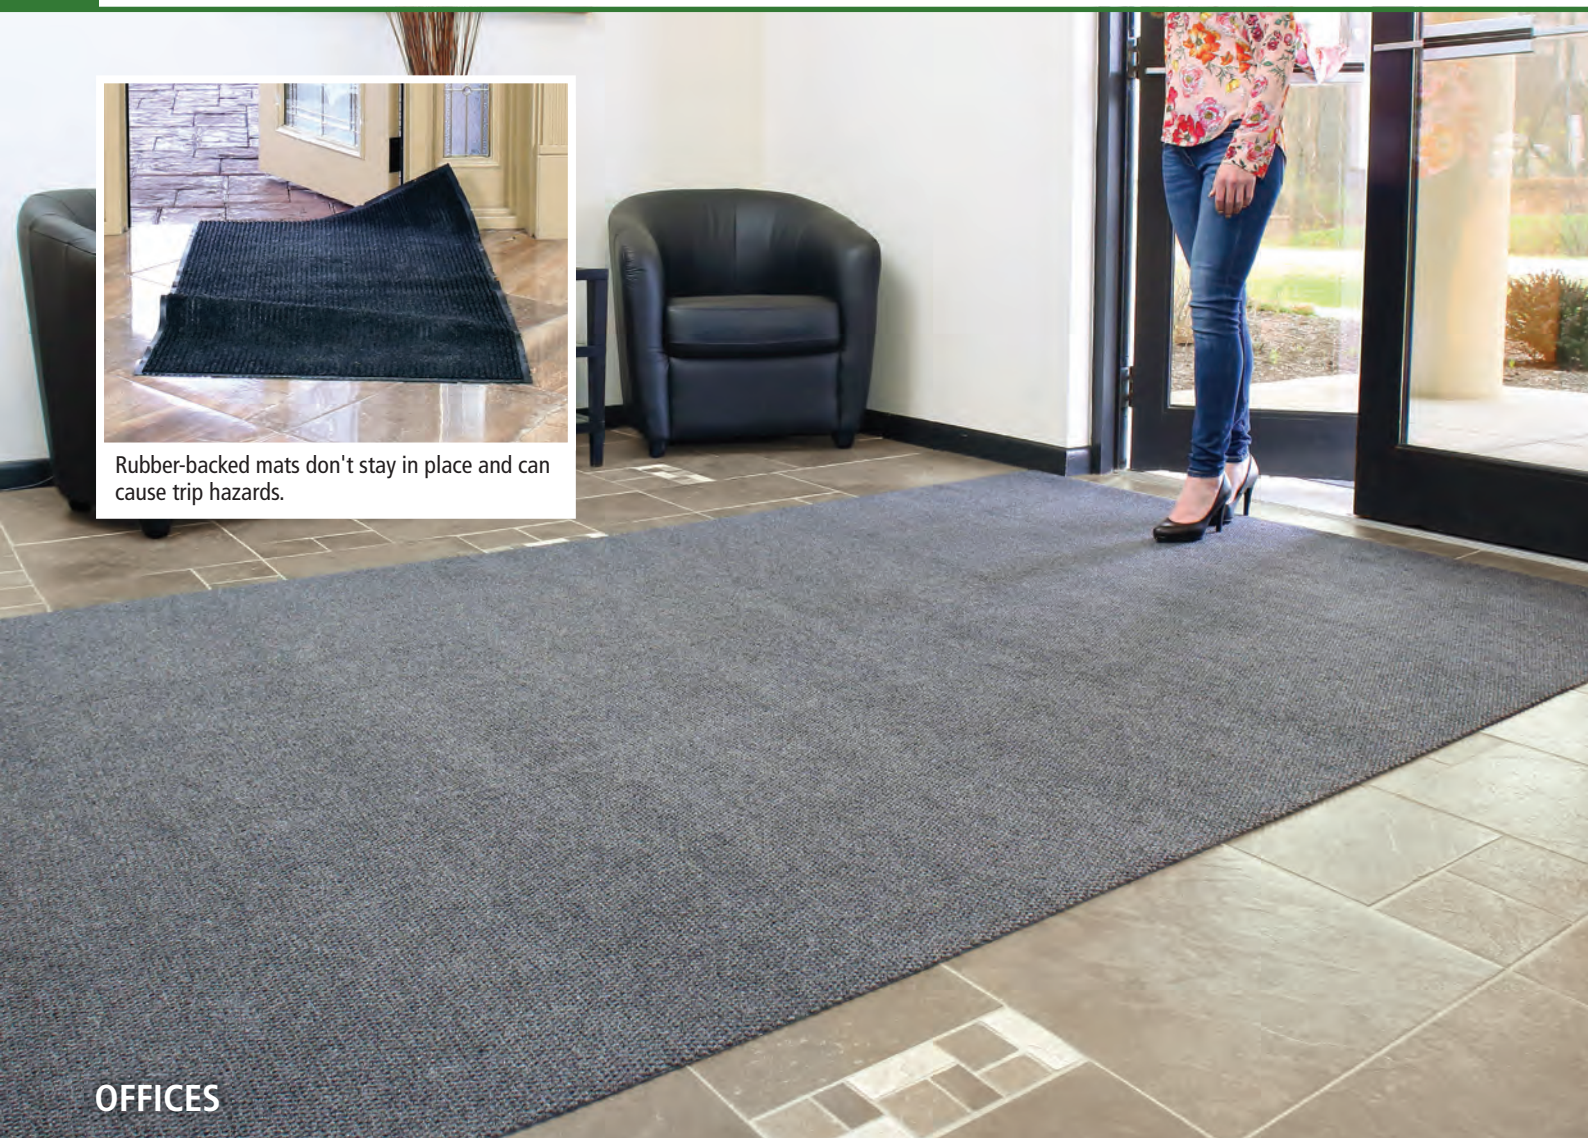

OFFICES



HOTELS



COMMERCIAL PREMISES



HEALTHCARE FACILITIES

PIG GRIPPY CARPETED ENTRANCE MATS

Safe floors never looked so good.

- ▶ Absorbent fibres are made from 100% post-consumer recycled polyester
- ▶ Safer no-trip walking surface that doesn't budge, curl or flip
- ▶ Commercial-grade durability that stays down for up to 6 months

Using the same adhesive backing and offering the same floor safety features as our Grippy Floor Mat range, our Carpeted Entrance Mats are a cost-effective and stylish replacement for those outdated trip-prone traditional rubber-backed entrance and scraper mats.

The absorbent fibres are made from 100% post-consumer recycled polyester and offer a highly absorbent surface that dries out quickly to prevent moisture from reaching your floors.

The mats absorb water, oil and grease, as well as trap dirt and debris to prevent them from being tracked around and becoming a slip hazard. The mat also sticks tight to most commercial floor surfaces, offering a safer no-trip walking surface that doesn't budge, curl or flip.

The attractive Berber texture of our mats adds a plush, high-end look to your premises, offering commercial-grade durability that stays down for up to six months, is easily cleaned in place and can be cut to size easily without fraying or unraveling.

DURABILITY



Stays down for up to **6 months**



WHERE IT WORKS

For entrances, walkways, aisles, front-of-house and reception areas where first impressions count, including:

- ✓ Retail Premises & Vehicle Dealerships
- ✓ Educational Settings
- ✓ Offices & Commercial Premises
- ✓ VIP Areas
- ✓ Leisure & Hospitality Venues
- ✓ Luxury Venues
- ✓ Hospitals & Residential Care Facilities

COMPATIBILITY

Suitable for hard floor surfaces including:

- ✓ Concrete
- ✓ Vinyl Tile
- ✓ Ceramic Tile
- ✓ Quarry Tile
- ✓ Linoleum

MAT MAINTENANCE

Easily clean in place using one of these tools:



Vacuum

Spot Clean



Brush



Carpet Extractor



Mop



For certifications details, see page 2.



GRP913X50

REQUEST A FREE SAMPLE

PIG® Grippy® Adhesive-Backed Berber Carpeted Entrance Mats



Specify Colour: Black Burgundy Grey			
Size	Unit	Absorbs Up To	Item #
91cm W x 15.3m L	1 roll	51.5L/roll	GRP913X50
183cm W x 3m L	1 roll	20.4L/roll	GRP916X10

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

STARTER PACK

Everything needed for floor safety in one kit!

Create safe, stylish entrances and walkways that impress with our Carpeted Entrance Mat Starter Pack. Contains one roll of Berber Carpeted Entrance Mat, a Safety Knife and Installation Board.



GRPE91301

PIG® Grippy® Adhesive-Backed Berber Carpeted Entrance Mat Starter Pack



Colour: Grey			
Size	Unit	Absorbs Up To	Item #
91cm W x 3m L	1 roll	10.3L/roll	GRPE91301
Contents: 1 - 91cm x 3m Grippy Berber Carpeted Entrance Mat • 1 - 96.5cm x 15cm Installation Board • 1 - Safety Knife			

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

To find out more about the technology behind our Carpeted Entrance Mats see page 4.



HAND WASHING AREAS



HAND DRYERS



SINKS

PIG GRIPPY ANTIMICROBIAL MATS

All the power of Grippy Floor Mat PLUS antibacterial and antifungal protection.

- ▶ Permanent infusion of DW-30 Ultra-Fresh antimicrobial technology
- ▶ Wicks liquids away and dries out quickly to stop them reaching your floors
- ▶ Can withstand daily mopping and scrubbing

Our Antimicrobial Floor Mats combine all the floor safety features of original Grippy Floor Mat with a permanent infusion of DW-30 Ultra-Fresh antimicrobial technology to help fight odours, mould and bacteria growth.

The polypropylene top layer, combined with the impermeable backing layers, captures water, soapy residue, sanitiser and urine on contact.

It wicks liquids away and dries out quickly to stop them reaching your floors, creating a barrier that prevents staining, grout damage and, most importantly, reduces slip and fall incidents.

The full-coverage adhesive backing sticks tight to most commercial floor surfaces and won't budge underfoot or during routine cleaning. And the durable surface can withstand daily mopping and scrubbing, as well as heavy foot traffic, maintaining a high-traction, non-slip, no-trip walking surface that won't shift, curl or bunch.

These durable, low-profile mats stay in place for up to six months without any deterioration in the antibacterial and antifungal properties, offering cleaner, safer, fresher-smelling washrooms and lavatories for longer.



For certifications details, see page 2.



DURABILITY



Stays down for up to **6 months**

WHERE IT WORKS

For sinks, hand dryers, washrooms, shower rooms and lavatories in a wide array of premises and industries, including:

- ✓ Janitorial Supplies Providers
- ✓ Washroom Services Providers
- ✓ Offices & Commercial Premises
- ✓ Hotels, Leisure & Hospitality Venues
- ✓ Facilities & Building Maintenance Management
- ✓ Educational Settings
- ✓ Service Stations & Airports

COMPATIBILITY

Suitable for hard floor surfaces including:

- ✓ Concrete
- ✓ Quarry Tile
- ✓ Vinyl Tile
- ✓ Linoleum
- ✓ Ceramic Tile

MAT MAINTENANCE

Easily clean in place using one of these tools:



Vacuum



Brush



Mop



Spot Clean



Carpet Extractor



Commercial Floor Scrubber

ANTIMICROBIAL MAT BUNDLE

Bundle pack keeps restrooms clean and safe.

We've combined our Grippy Adhesive-Backed Antimicrobial Mats into one handy pack. Bundle comes complete with Urinal, Toilet, Plunger, and Sink and Dryer Mats.



GRP7000

PIG® Grippy® Adhesive-Backed Antimicrobial Floor Mat Bundle



Size	Unit	Item #
Mixed	5 pads	GRP7000

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

To find out more about the technology behind our Antimicrobial Mats see page 5.

GRIPPY ANTIMICROBIAL RESTROOM MATS

Antibacterial and antifungal floor protection for safer, cleaner, fresher lavatories.



Grippy Adhesive-Backed Antimicrobial Floor Mats for Urinals

Don't mask odours with fragrance. Capture and remove them with our Antimicrobial Urinal Mats.

Not only do they help catch those drips and splashes that, left untreated, cause unpleasant odours and create slip and fall hazards, but they also help prevent unsightly staining to grout and lasting damage to floors.

PIG® Grippy® Adhesive-Backed Antimicrobial Floor Mats for Urinals



Size	Unit	Item #
43cm W x 46cm L	6 pads/box	GRP7001
43cm W x 46cm L	36 pads (6 boxes of 6 pads)	GRP7601
48cm W x 60cm L	6 pads/box	GRP7002
48cm W x 60cm L	36 pads (6 boxes of 6 pads)	GRP7602

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.



Grippy Adhesive-Backed Antimicrobial Floor Mats for Toilets

Designed to fit around the base of your toilet, our Antimicrobial Floor Mats for Toilets absorb urine to prevent unpleasant odours.

They provide drip and splash coverage for improved floor safety and cubical cleanliness. Long-term use prevents unsightly staining to grout and damage to floor surfaces for enhanced appearance.

PIG® Grippy® Adhesive-Backed Antimicrobial Floor Mats for Toilets



Size	Unit	Item #
39.5cm W x 46cm L	6 pads/box	GRP7003
39.5cm W x 46cm L	36 pads (6 boxes of 6 pads)	GRP7603

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.



Grippy Adhesive-Backed Antimicrobial Floor Mats for Plungers

Keep floors safe, dry and slip-free with our Antimicrobial Plunger Mat. Ideal for eradicating odours, controlling drips and eliminating puddles under toilet plungers and brushes, soap dispensers and other small-footprint areas.

REQUEST A FREE SAMPLE

PIG® Grippy® Adhesive-Backed Antimicrobial Floor Mats for Plungers



Size	Unit	Item #
23cm W x 23cm L	6 pads/box	GRP7005

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

PIG GRIPPY ANTIMICROBIAL SINK AND DRYER MATS

Freshen up with our range of antibacterial and antifungal floor protection.

Grippy Adhesive-Backed Antimicrobial Floor Runners

The “industry-first design” of our Antimicrobial Floor Runners lets you roll out and cut to length the perfect size runner for continuous drip and splash coverage wherever custom sizes are needed.

Available in 8- and 15-metre long rolls for odour-busting coverage in front of sinks, shower cubicles and even urinals.



PIG® Grippy® Adhesive-Backed Antimicrobial Floor Mat Runners

Size	Unit	Item #
91cm W x 15m L	1 roll	GRPAM36201
61cm W x 8m L	1 roll	GRP7004

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

Grippy Adhesive-Backed Antimicrobial Floor Mats for Sinks and Dryers

Antimicrobial Sink and Dryer Mats provide effective drip and splash coverage in front of sinks and underneath hand dryers and towel dispensers.

Can also be used in front of drinking fountains, showers, transition areas or anywhere you need to absorb water and other liquids to control slip and trip hazards and prevent the growth of odour-causing bacteria and mould.



REQUEST A FREE SAMPLE

PIG® Grippy® Adhesive-Backed Antimicrobial Floor Mats for Sinks and Dryers

Size	Unit	Item #
43cm W x 61cm L	4 pads/box	GRP7006
43cm W x 61cm L	16 pads (4 boxes of 4 pads)	GRP7606
61cm W x 89cm L	4 pads/box	GRP7007
61cm W x 89cm L	16 pads (4 boxes of 4 pads)	GRP7607

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.



MACHINE OVERSPRAY



DRUM STORAGE



LEAKING EQUIPMENT



WALKWAYS

PIG GRIPPY ABSORBENT MATS

Tough, low-profile, sticks-tight floor protection for industrial environments.

- Can withstand heavy foot traffic, pallet truck and equipment drive-overs
- No-slip, no-trip solution for cleaner and safer industrial floors

Grippy Absorbent Mats, with their layers of fine-fibre polypropylene, safely absorbs leaks, drips and overspray of oils, coolants, solvents and water around workstations, machinery, equipment and walkways in industrial environments.

With its tough spunbonded layer, heavy-duty zigzag stitching and low-profile design, our Absorbent Mats can withstand heavy foot traffic, pallet truck and equipment driveovers in challenging industrial environments without shifting, bunching up or flipping over.

The exclusive adhesive backing sticks tight on most commercial floor surfaces to provide a no-slip, no-trip solution for cleaner and safer industrial floor. Peels up easily when the time comes to replace – stays put for up to three months or until the mat is saturated or showing signs of wear.

Mats are also great for lining workbenches, countertops, toolboxes and more to prevent oily stains and grime.

Use in conjunction with our original Grippy Floor Mat and Grippy Floor Mat with Safety Borders as part of your industrial floor safety programme for cleaner and safer floors throughout your premises.



DURABILITY



Stays down for up to **3 months**

WHERE IT WORKS

For spill-prone areas, workbenches, toolboxes, dispensing stations, equipment repair areas and around machines with oily overspray in a wide variety of premises and industries, including:

- ✓ Manufacturing Environments
- ✓ Warehouses & Storage Facilities
- ✓ Transportation & Logistics Hubs
- ✓ Heavy Engineering
- ✓ Work & Machine Shops
- ✓ Industrial Paint Booths

COMPATIBILITY

Suitable for hard floor surfaces including:

- ✓ Concrete
- ✓ Quarry Tile
- ✓ Vinyl Tile
- ✓ Linoleum
- ✓ Ceramic Tile

MAT MAINTENANCE

Easily clean in place using one of these tools:



Vacuum



Brush



For certifications details, see page 2.



MAT32100

REQUEST A FREE SAMPLE

PIG® Grippy® Adhesive-Backed Absorbent Mat Pads



Size	Unit	Absorbs Up To	Item #
41cm W x 61cm L	10 pads	3.8L/pack	MAT3200

PIG® Grippy® Adhesive-Backed Absorbent Mat Rolls



Size	Unit	Absorbs Up To	Item #
81cm W x 30m L	1 roll	39.7L/roll	MAT32100
81cm W x 15m L	1 roll	19.9L/roll	MAT3250
41cm W x 15m L	1 roll	9.8L/roll	MAT1650
81cm W x 7.6m L	1 roll	5L/roll	MAT1625
81cm W x 102cm L	1 roll	1.3L/roll	MAT3251

Please note: New Pig provides the warranties implied by law only in relation to New Pig adhesive-backed mats. The customer must ensure that these products are suitable for use in their premises and on their flooring. Product lifespan dependant upon usage conditions and traffic patterns. Further details to relevant terms and conditions can be found on page 24.

To find out more about the technology behind our Absorbent Mats see page 5.

PIG GRIPPY ADHESIVE-BACKED MAT ACCESSORIES

Straight cuts, smooth placement, simple removal – tools to make an easy job even easier!



GRP001

Grippy Adhesive-Backed Mats Installation Board

Produce clean, accurate cuts with this convenient, pre-scored template and use as a float to quickly smooth out Adhesive-Backed Mat in one pass.

Helps create perfect 45° angles for fitting around obstacles or cutting awkward shapes. Two boards can be connected together to create an extra-long cutting guide for making long diagonal cuts or installing wide mats.

Installation Board



Size	Unit	Item #
96.5cm W x 15cm D	1 each	GRP001



GRP012

Grippy Adhesive-Backed Mats Safety Cutting Knife

Make clean, professional and precise cuts when fitting Grippy Mat with the safety-first knife.

Recessed blade, with protective edges, makes quick, clean cuts, helping to eliminate injuries. Perfect tool to use in combination with pre-scored guidelines of our Installation Board (GRP001).

Safety Cutting Knife



Description	Unit	Item #
Safety Knife	1 knife with 2 blades	GRP012
Replacement Blades	10/bag	GRP011



GRP021

Grippy Adhesive-Backed Mats Installation Roller

Ergonomic design for comfortable grip and upright operation makes installing long runs of Grippy Mat quicker, easier and less demanding on your knees and back.

Simply push along to smooth Grippy Mat into place without creating air pockets or bubbles.

Installation Roller For Grippy® Adhesive-Backed Mats



Size	Unit	Item #
96.5cm W x 147cm L	1 each	GRP021



GRP020

Grippy Adhesive-Backed Mats Removal Tool

Tool's claw-like jaws "lock" onto the mat material to provide a firm, comfortable handgrip that won't dig into your hands when pulling up and removing Grippy Mat.

Made of durable, high-quality aluminium and features a rounded handle for easy grip.

Removal Tool For Grippy® Adhesive-Backed Mats



Size	Unit	Item #
9cm W x 19cm L x 13cm H	1 each	GRP020

EASY TO INSTALL

Use our installation tool as a guide for straight cuts, then pick it up and use it to smooth Grippy Adhesive-Backed Mat into place. Also works for cutting corners at 45° angles to extend product life.



1. Prepare Floor

Clean, rinse and dry your floor thoroughly to remove detergent film so Mat will properly adhere.



2. Cut to Fit

Roll out Grippy Mat and cut to size using a safety knife, scissors or utility blade.



3. Stick It Down

Smooth out mat and press it into place using Installation Board, Roller or other flat edge.



4. Trim Edges and Corners

Cut angled corners during installation and trim during use to reduce potential lifting.

EASY TO MAINTAIN

Leave Grippy Mats in place and clean along with the rest of your floor for super easy, stay-in-place maintenance.



Routine Cleaning*

You can sweep, vacuum and mop to keep mat clean and fresh without shifting.



Floor Scrubbers and Extractors*

Pre-treat tougher stains by spot-cleaning before using your scrubber/extractor's low speed/ water settings to clean.



Trimming Edges and Corners

If edges become worn or begin to lift, peel back mat until fresh adhesive is exposed, trim and press the new edge into place.




Handling Excess Water*

Remove excess water when your mat becomes saturated. Use a wet-vac or extractor to remove excess water and use fans/ blowers to reduce drying times.

*Note: Absorbent Mats NOT suitable for mop, spot, or extractor cleaning. Neither Absorbent Mats nor Carpeted Entrance Mats are compatible with floor scrubber cleaning. Handling Excess Water instructions do NOT apply to Absorbent Mat range.

EASY TO REMOVE & REPLACE

Replacing Grippy Adhesive-Backed Floor Mats is easy – just pull them up! Our exclusive adhesive formulation won't leave any residue behind so you don't need to worry about sticky floors.

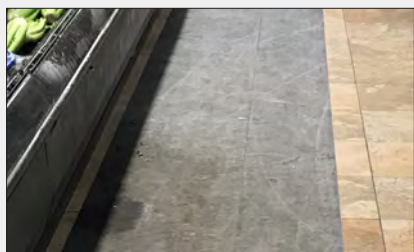

Frequency of Changeouts

Our mats are long lasting and extremely durable. When they show obvious signs of wear, or a weakened bond to the floor, they should be replaced.



Removing Mats by Hand

1. Peel up a corner of the mat using your fingers or the scraper side of the Safety Knife.
2. Bend at the knees while lifting the corner until the mat can be gripped by both hands.
3. Pull the mat up in a smooth, continuous motion, inching backwards as you go – do NOT use jerking motions to remove.



Removing Mats with our Removal Tool

Most Grippy Mats pull up easily by hand. Our Removal Tool is helpful for removing long runs, wide sizes or mats that have been in place for extended periods of time. Simply lock the tool's jaws onto the mat material and pull.

To order, please contact:



GRIPPY FLOOR MATS

See Pages 8-9



GRIPPY CUSTOM-PRINTED FLOOR MATS

See Pages 10-11




GRIPPY FLOOR MATS WITH SAFETY BORDERS

See Page 12



GRIPPY BERBER CARPETED ENTRANCE MATS

See Pages 14-15

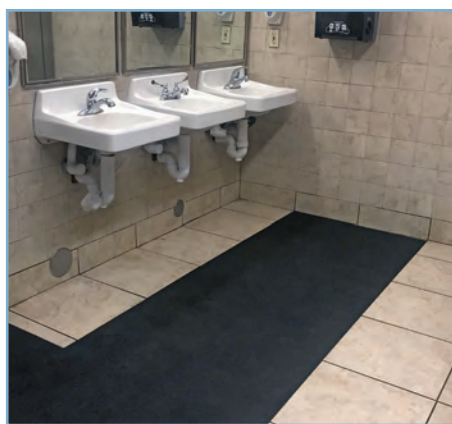

GRIPPY ANTIMICROBIAL MATS

See Pages 16-19



GRIPPY ABSORBENT MATS

See Pages 20-21

New Pig Grippy® Adhesive-Backed Mat Notice: New Pig adhesive-backed mats are formulated to work with most common industrial and commercial floor surfaces but are not intended for home/residential use and wood flooring. All adhesive mats have some potential to leave residue or lift or discolour finish coatings, paint, and loose or pre-damaged tiles depending on the condition and age of the floor surface. If you have questions about the suitability of New Pig adhesive-backed mats for your application, test a 15cm x 15cm piece in a non-critical area before use.

New Pig Grippy® Adhesive-Backed Mats should be replaced if they show signs of wear or damage and should always be changed out every 3 to 6 months, depending on conditions and traffic patterns.

Customer assumes the risk that a New Pig adhesive-backed mat may damage or alter their existing flooring or floor covering. Other than warranties implied by law, New Pig provides no warranty of fitness for a particular purpose and no warranty that an adhesive-backed mat will be fit for customer's intended use. Other than in respect of liability which New Pig cannot lawfully exclude, New Pig shall have no responsibility for, and customer hereby releases and discharges New Pig from, any direct, indirect, incidental or consequential damages to their floors, flooring material, or any other surfaces in their premises. Customer is solely responsible for determining the fitness and appropriateness of the use of New Pig adhesive-backed mats in their premises.