



PIG Outdoor Filter Berm Pad



FLT902

PIG Outdoor Filter Berm Pad Capture oils and other hydrocarbons whilst rainwater flows through.

Replaceable absorbents liner berm walls to capture leaks and spills of oils and fuels; clean water passes through walls as hydrocarbons are filtered out. Foam sidewalls provide structure and increase sump capacity in the event of large rainfalls (ensures adequate filtering time).



Corner grommets let you stake Berm Pad to the ground to help stay in place when empty.

PIG® Outdoor Filter Berm Pad



SIZE	ABSORBS UP TO	ITEM #
49.5cm W x 68.6cm L x 5.7cm H	2.8 L	FLT900
Refill Liner for FLT900	2.8 L	RFL900
68.6cm W x 99cm L x 5.7cm H	5.1 L	FLT901
Refill Liner for FLT901	5.1 L	RFL901
137cm W x 198cm L x 5.7cm H	17.4 L	FLT902
Refill Liner for FLT902	17.4 L	RFL902



RFL902
Absorbent liner is easy to remove and replace.




New Products

Foam sidewalls provide structure and increase sump capacity in the event of large rainfalls.




Absorbent liner is easy to remove and replace.

Refill Liner
RFL900

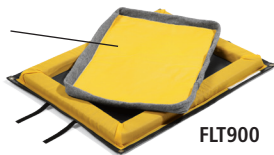


FLT900

Refill Liner
RFL901

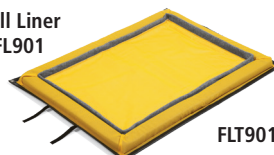

FLT901

Refill Liner
RFL902

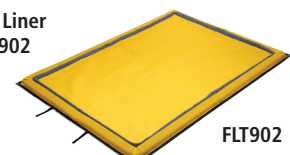

FLT902

PROBLEMS THIS PRODUCT SOLVES

- Customers need to capture oils and fuels that may run off of equipment, drums or other materials that they're storing outdoors.
- Provides a quick temporary way to contain and filter oils and fuels from water.
- Product is simple to use and not bulky like traditional spill containment products.

FEATURES/BENEFITS

Capture oil, gas and other hydrocarbons whilst allowing clean rainwater to flow through.

Made from UV resistant materials.

Use Outdoor Filter Berms on construction sites, oil fields and other areas where spill containment is needed but shelters or structures are not available.

Replaceable absorbents quickly capture oil, grease and fuel leaks and spills.

New Products

